



Check bobbin case free play – should have about .012 - .015 clearance between the bobbin case and position bracket

To adjust, loosen the pinch screw in front of machine bed, and adjust with this eccentric