

SINGER
648E3/648E6/648E7


173142

620 173745044

Machine No. 648E

List of Parts—Machines Nos. 648E3, 648E6 and 648E7


ATTACHMENT SET 171128

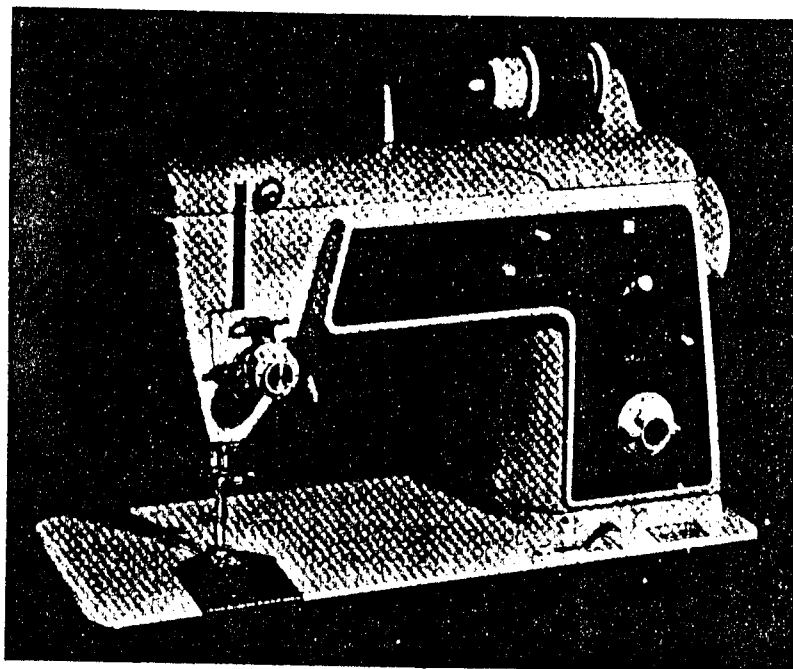

- 21906 Chainstitch Attachment Loop Retainer Disc
- 21913 Chainstitch Attachment Throat Plate
- 161133 Tube of Oil
- 161166 Zipper Foot
- 161168 Presser Foot for button sewing
- 161172 Seam Guide
- 161917 Presser Foot Plate (snap-on, plastic), for sewing Buttonholes
- 161919 Presser Foot Plate (snap-on), for Straight Sewing
- 163242-658 Spool Pin for two needle sewing
- 163455 Chainstitch Attachment Thread Guide
- 163483 Special Purpose Presser Foot
- 172185 Disc No. 1, for Arrowhead Stitch
- 172187 Disc No. 2, for Scallop Stitch
- 172189 Disc No. 3, for Diamond Stitch
- 172190 Disc No. 4, for Solid Scallop Stitch
- 172191 Disc No. 5, for Banner Stitch
- 172229 Disc No. 6, for Crescent Stitch
- 174527 Disc No. 9, for Multiple Zig-Zag Stitch
- 174528 Disc No. 8, for Blind Stitch
- 174529 Throat Plate for straight sewing
- 174533 Disc No. 10, for Ball Stitch
- 174534 Disc No. 12, for Domino Stitch
- 174536 Disc No. 14, for Comb Stitch
- 174538 Disc No. 18, for Solid Pyramid Stitch
- 174540 Disc No. 11, for Ribbon Stitch
- 174547 Disc No. 21, for Chevron Stitch
- Needle Cat. 2020, Size 14 (3)
- Needle Cat. 2020, Size 16 (3)
- Twin Needle Cat. 2028, Size 14 (1)
- 163131 Bobbin (3)



List of Parts—Machines Nos. 648E3, 648E6 and 648E7

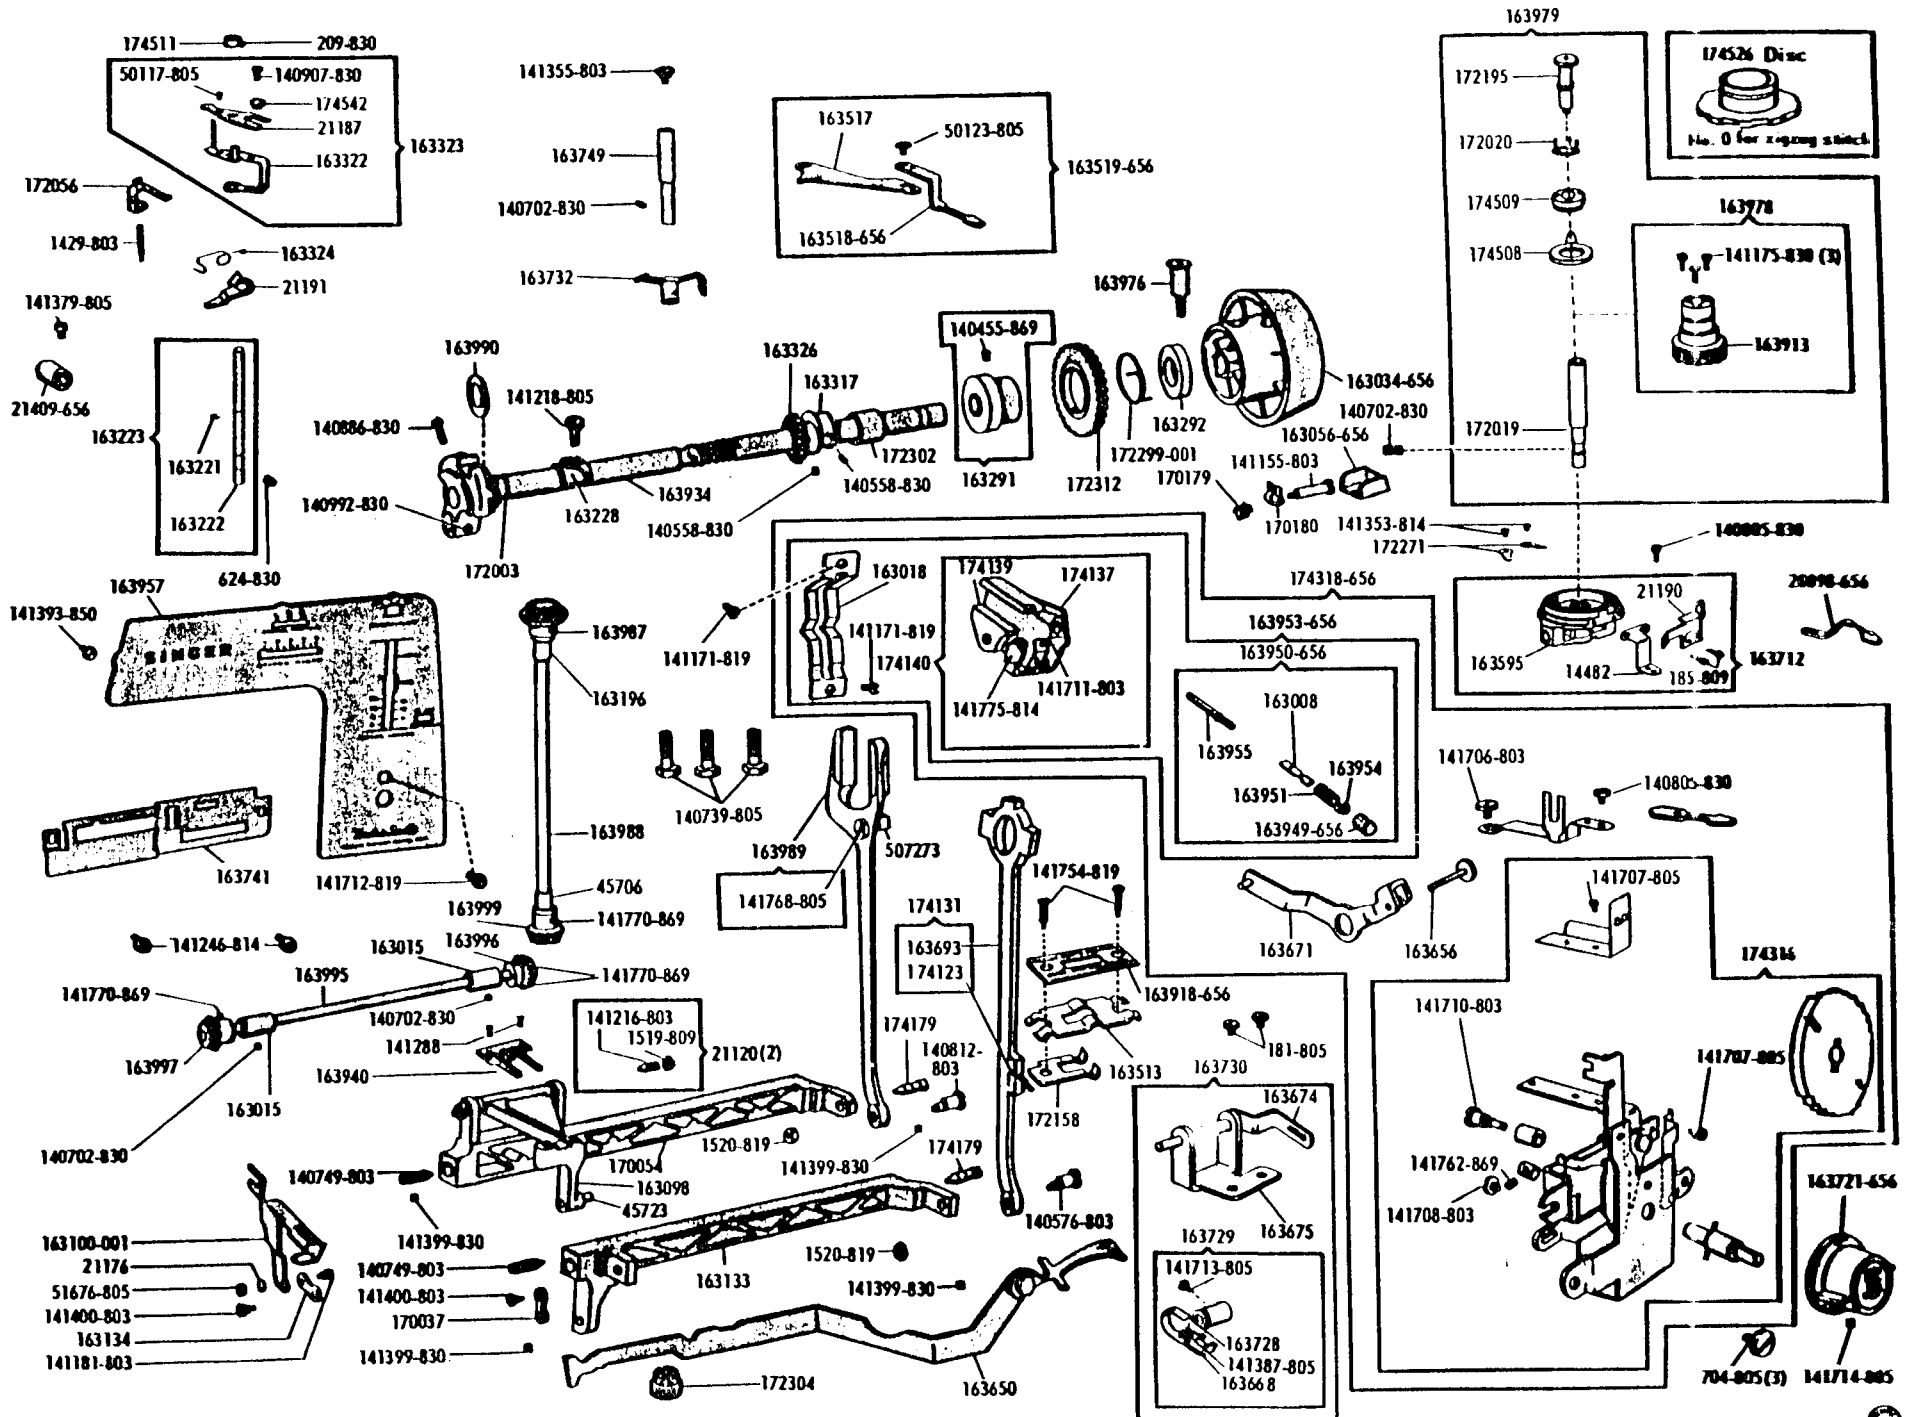

Electrical Parts—Machines Nos. 648E3, 648E6 and 648E7

