



## P60456

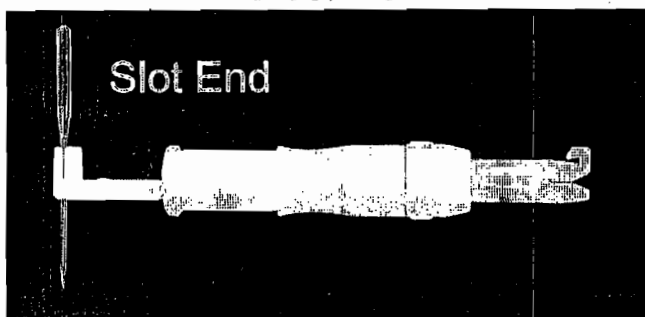

### NEEDLE CHANGING (Switch off power on machine)

Place needle in the opening on the Slot End of the tool. The flat side of the needle should be facing outward.

Use tool to position needle in the needle holder as far as possible, with the flat side facing toward the thumb screw.

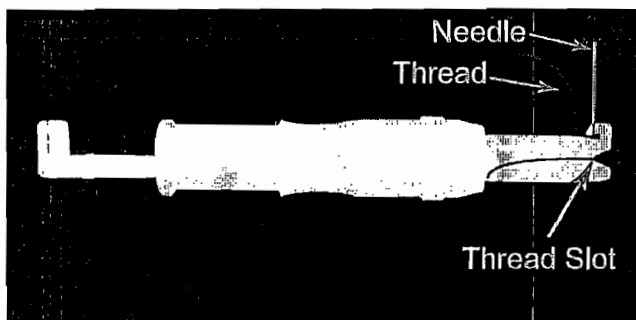

### NEEDLE THREADING (Switch off power on machine)

Position thread into the thread slot at the "Threading" end of tool.

Make sure hook is in an up or down position and push tool against the needle, facing the eye and above the eye. Slide it down the needle while also pushing against the needle.

When eye is reached the threader pin will push the thread through the eye. Carefully remove the tool and use the small hook to catch the protruding thread loop and pull it out the back.