



SINGER
466K


Parts Chart for **SINGER*** 466K Class Machines

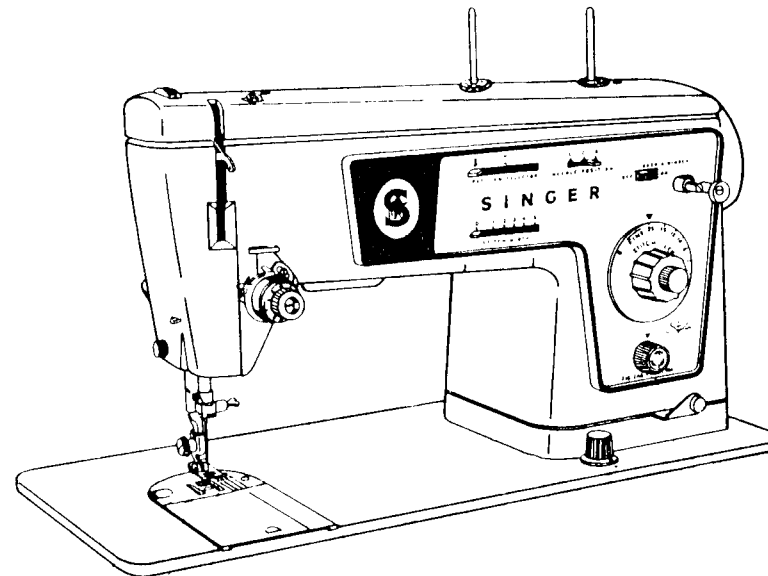


MACHINE NO. 466K

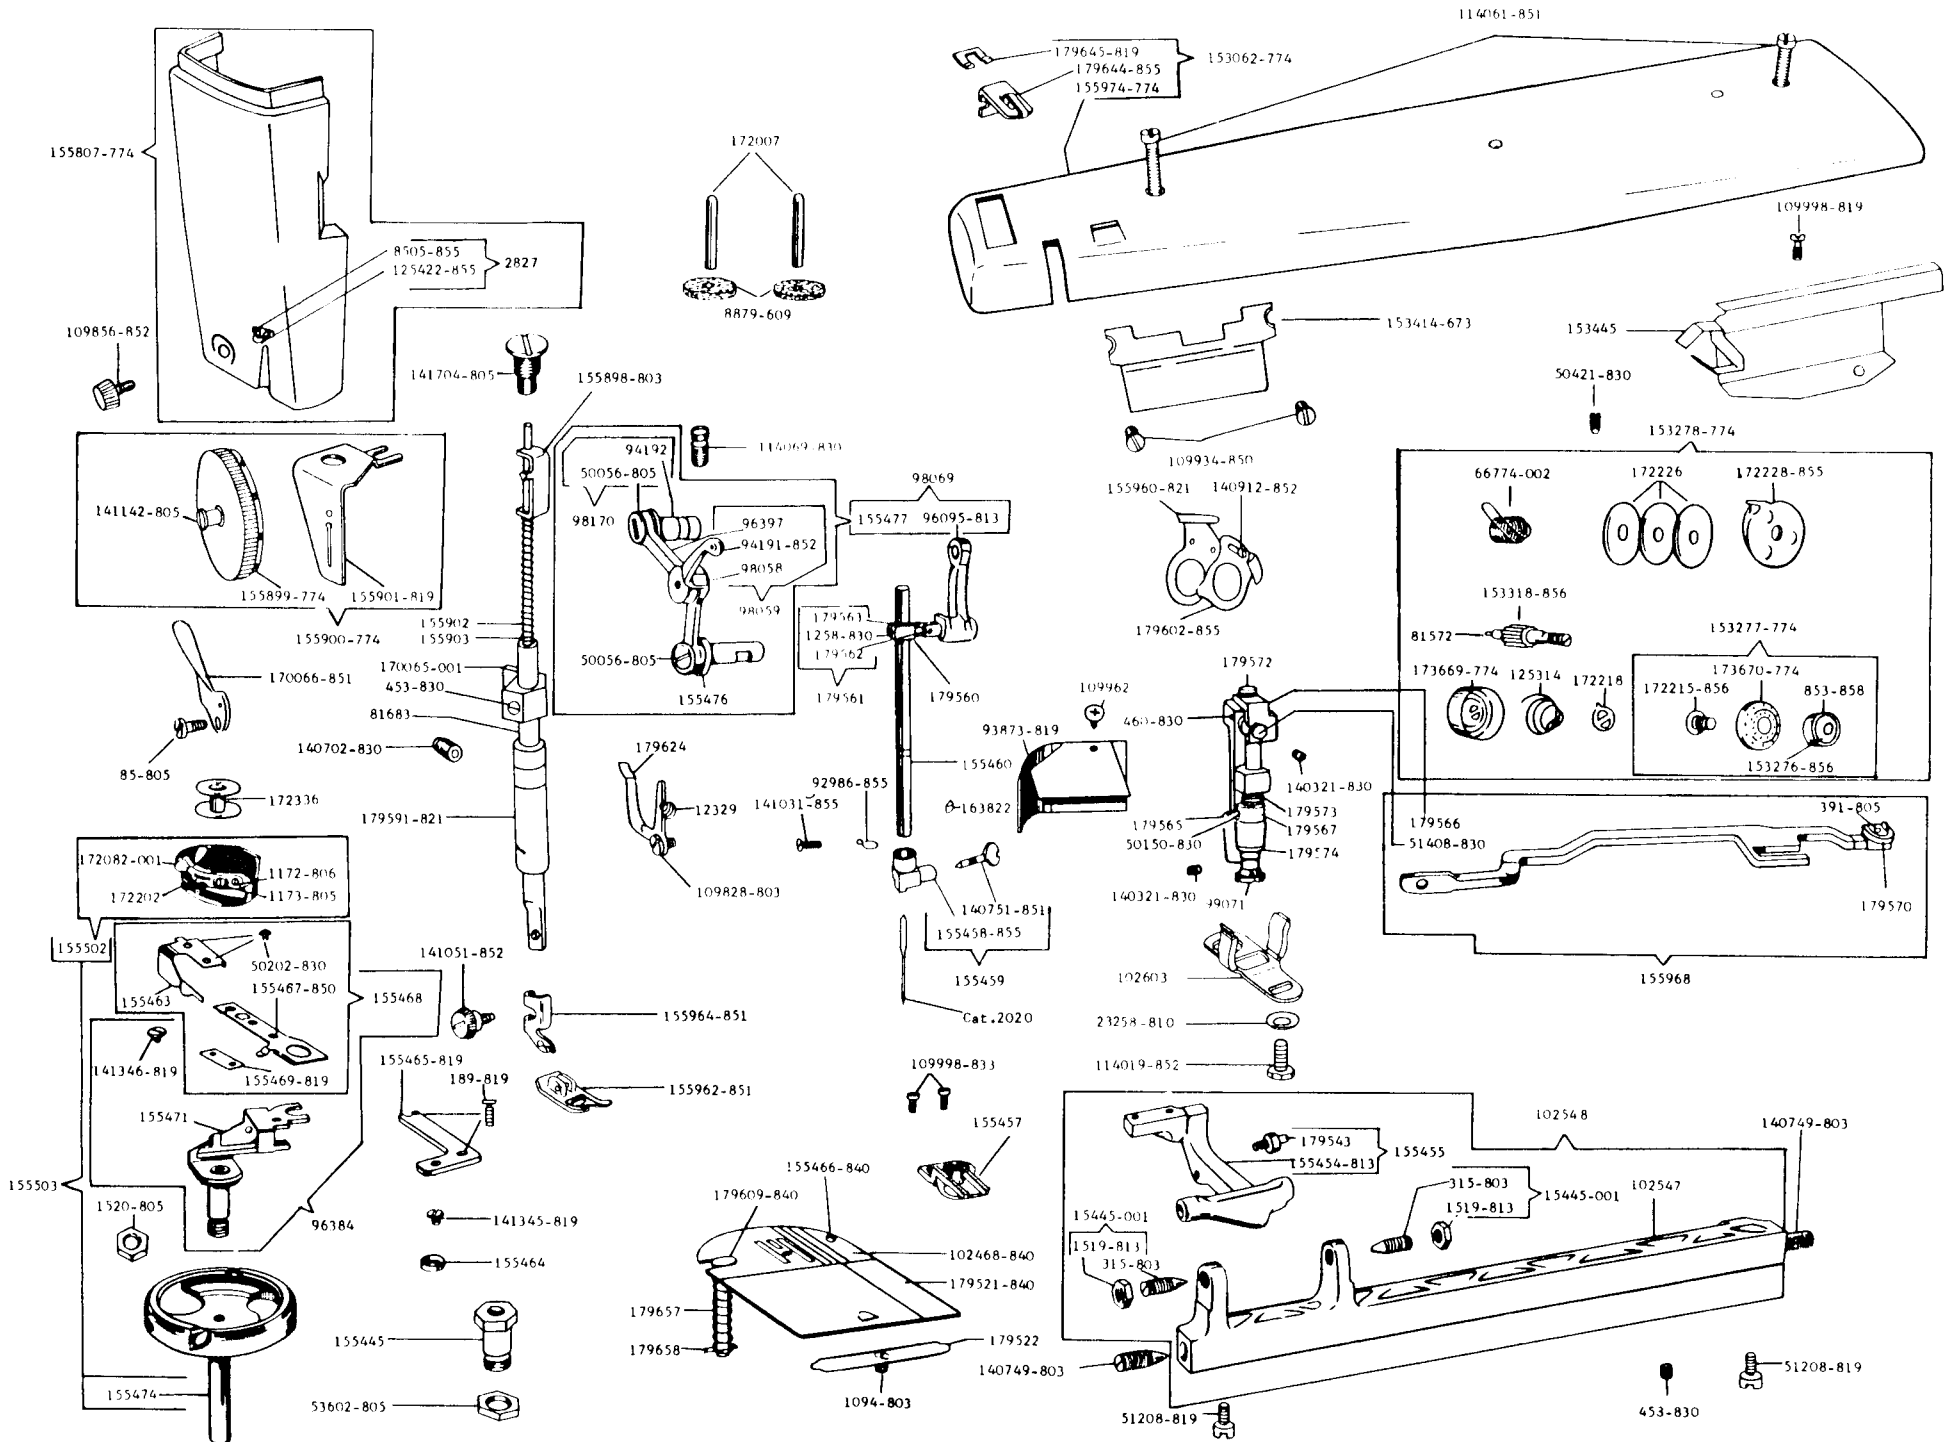


MACHINE NO. 466K

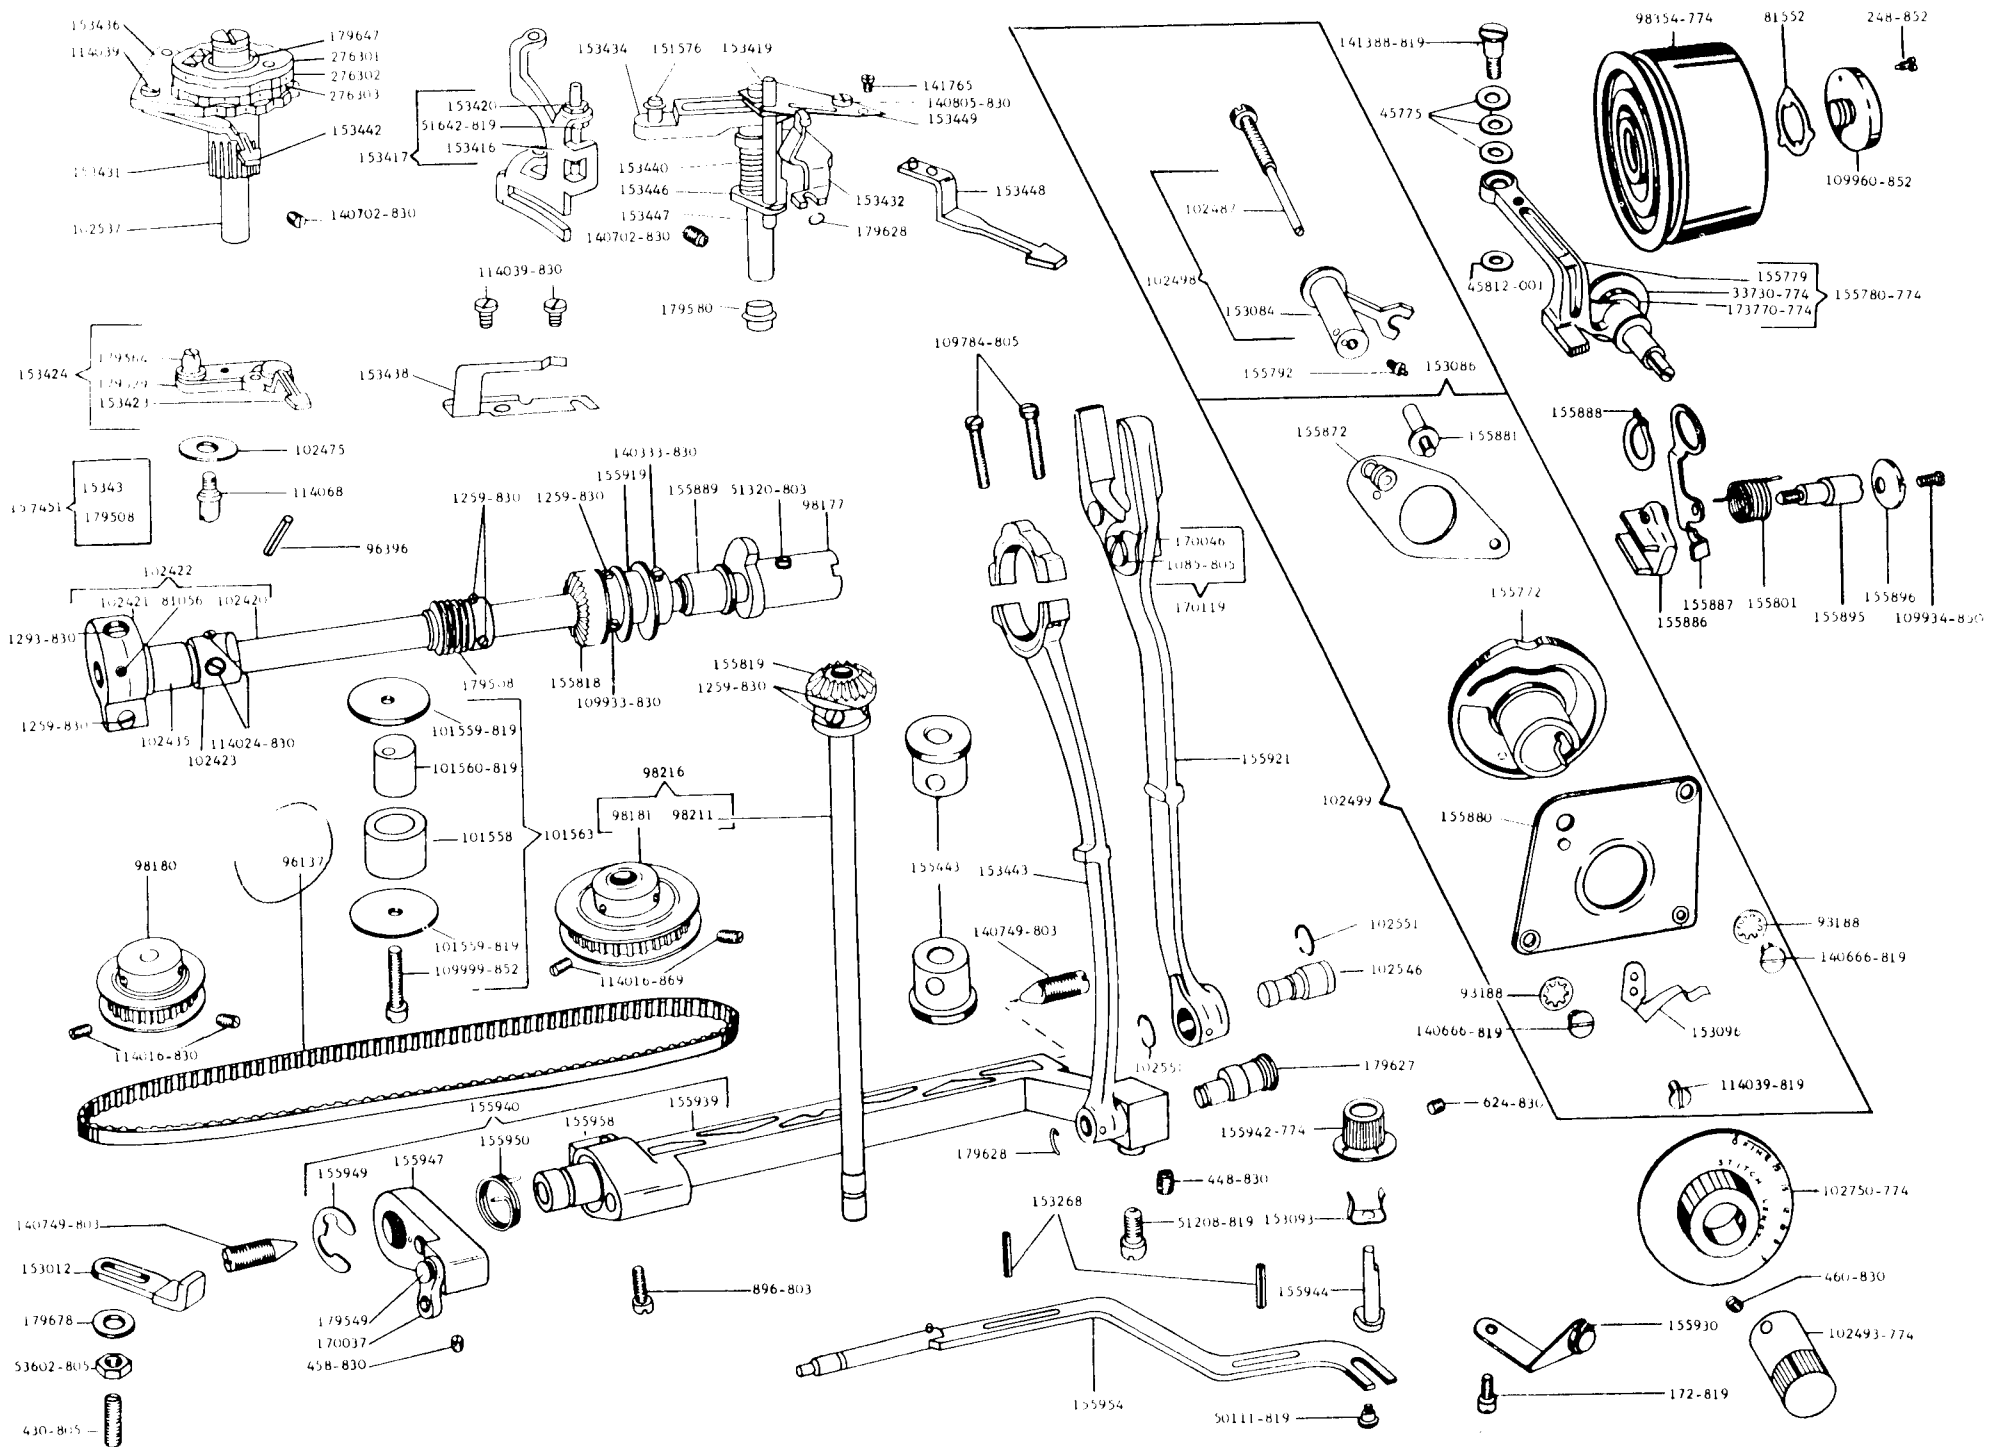

MACHINE NO. 466K

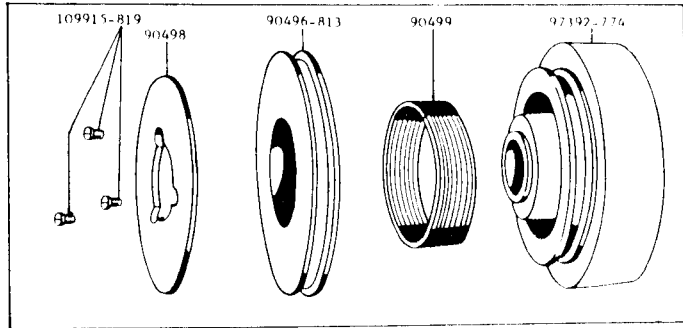

97192-774

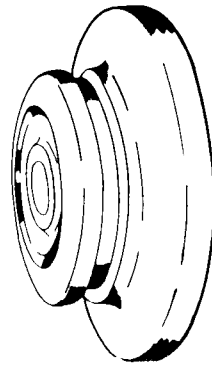


81560-774


171141

101570-042 For 466K1 & 466K5
101570-058 For 466K3 & 466K4


101569-016 For 466K3 & 466K4
101569-042 For 466K1 & 466K5

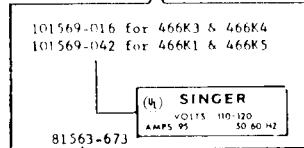

81563-673




 


155427-774

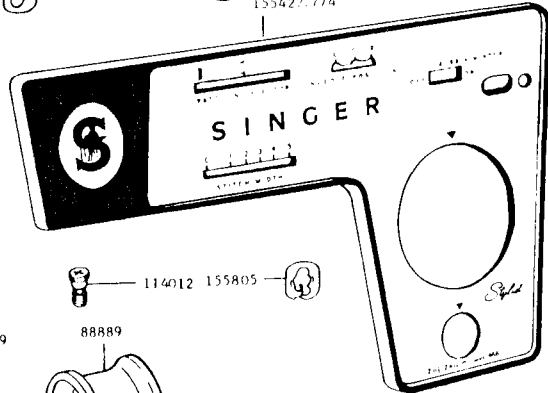


114012 155805

   141397-855

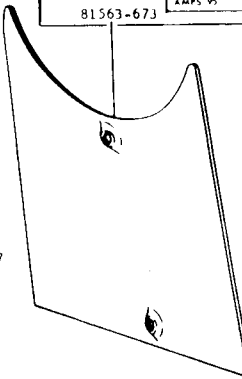


109999-851
127-851

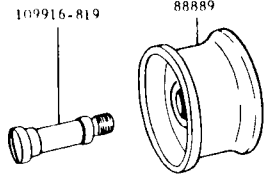


51045-830

 
101579-003 For 466K1 & 466K5
101584-003 For 466K3 & 466K4



51045-830

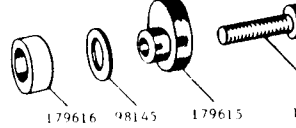


109044-819

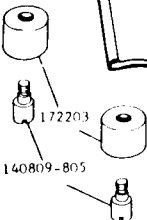

172203

155446


155452

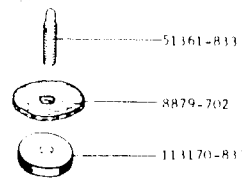

51361-813

8879-702

113170-813

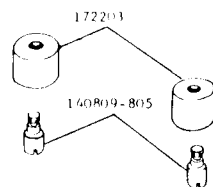


172203

140809-805



 90941-774




179674

98297-774

161295



 Cat. 2020




172336




Cat. 2028



 161307



161127

 

161455



161963