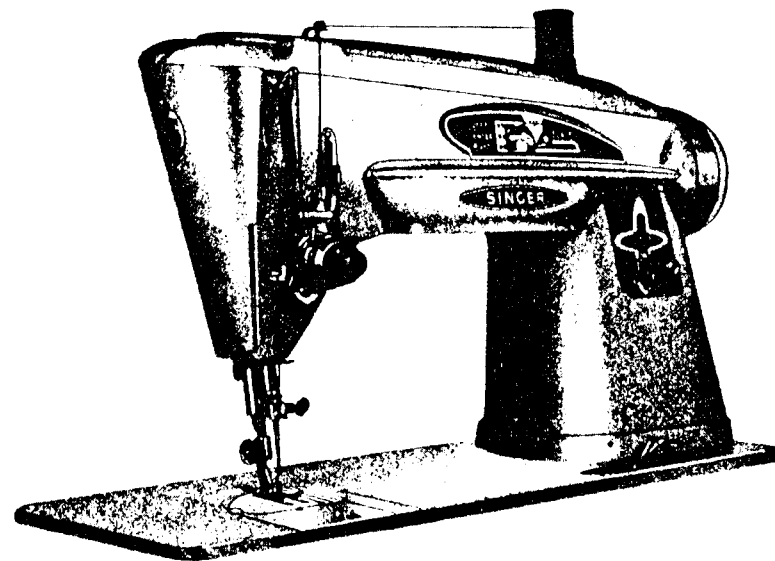



SINGER
503A

List of Parts—Machine No. 503A

ATTACHMENT SET 161744


81200	Binder
161133	Tube of Oil
161166	Zipper Foot
161168	Button Foot
161172	Seam Guide
161195	Hemmer Foot
161276	Lint Brush
161294	Screwdriver (IG)
161295	Screwdriver (SH)
161561	Ruffler
161745	Attachment Box
163483	Special Purpose Foot
170071-001	Presser Foot
172185	Fashion Disc 1
172191	Fashion Disc 5
172229	Fashion Disc 6
172236	Fashion Disc 7
172336	Bobbin (Plastic) (4)
174527	Fashion Disc 9
174528	Fashion Disc 8
174529	Throat Plate
174533	Fashion Disc 10
174540	Fashion Disc 11
2020(15x1)	Needles 14 (3) 16 (3)
21185	Instruction Book

List of Parts—Machine No. 503A

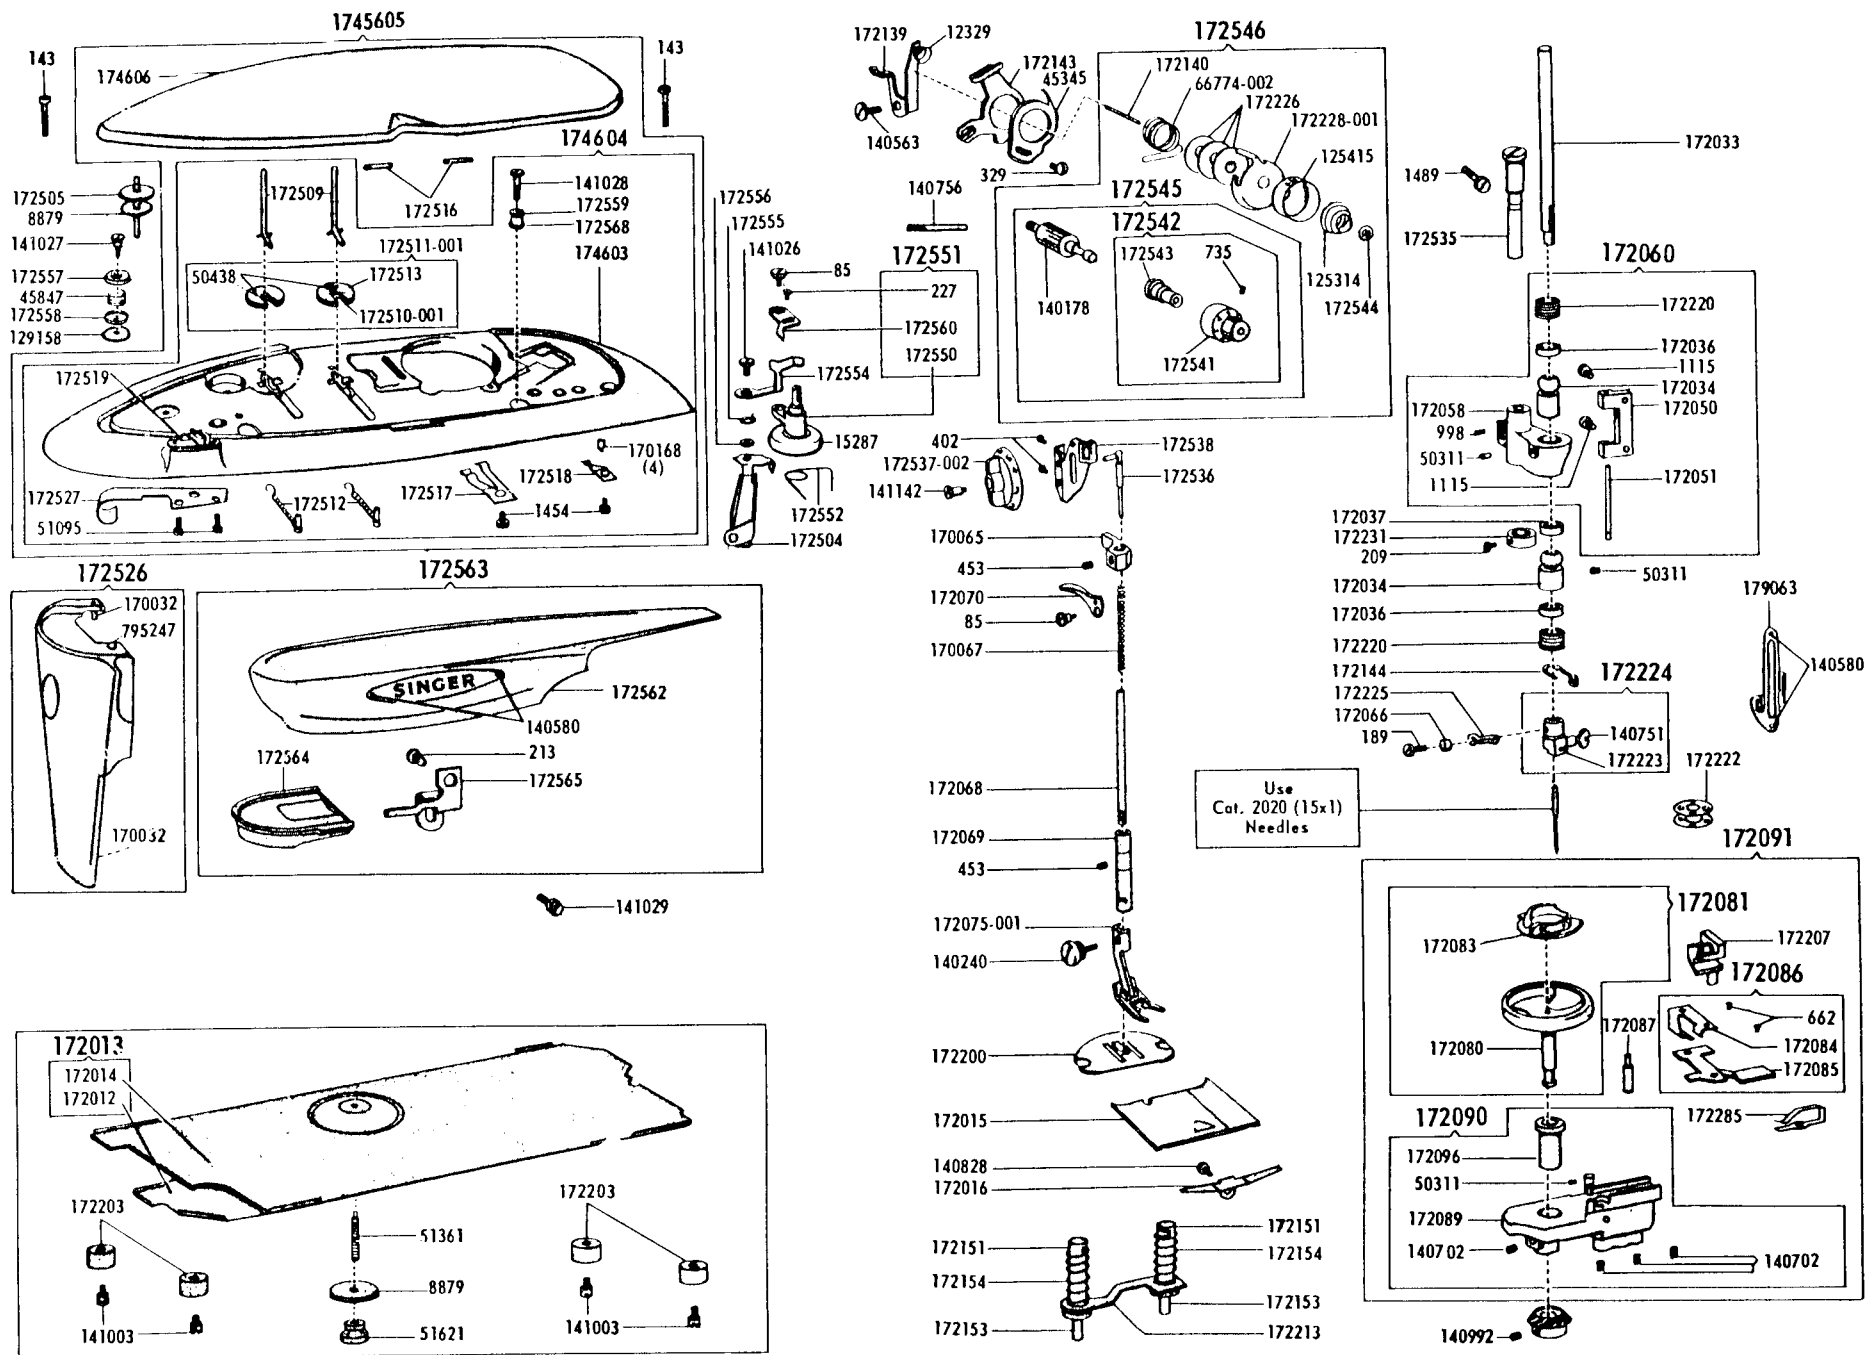


Electrical Parts

Machine No. 503A1

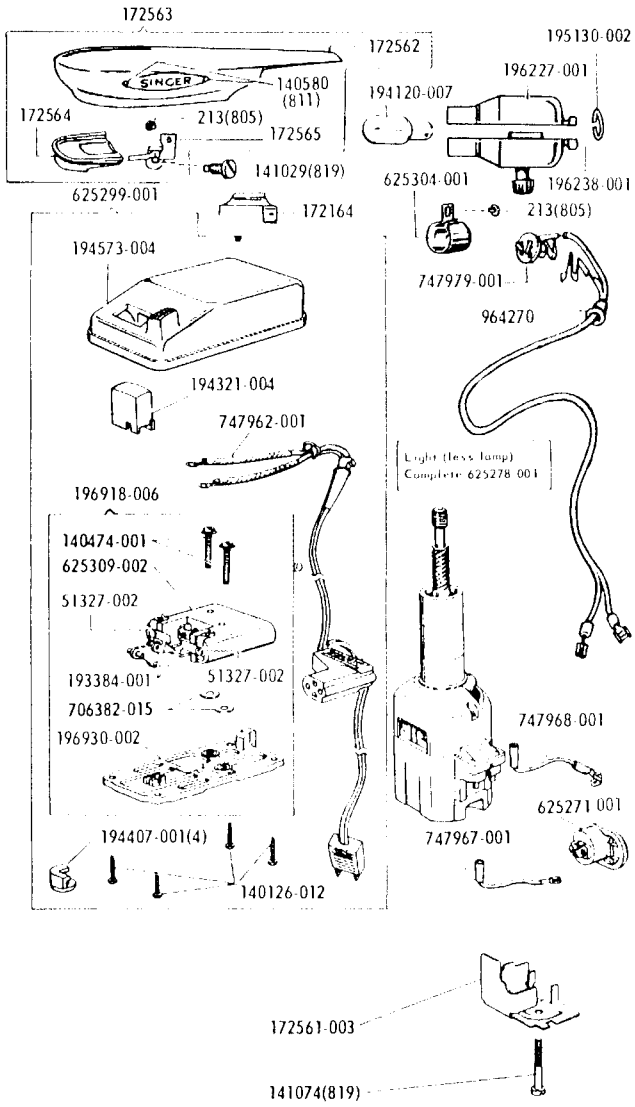

Machine No. 503A6

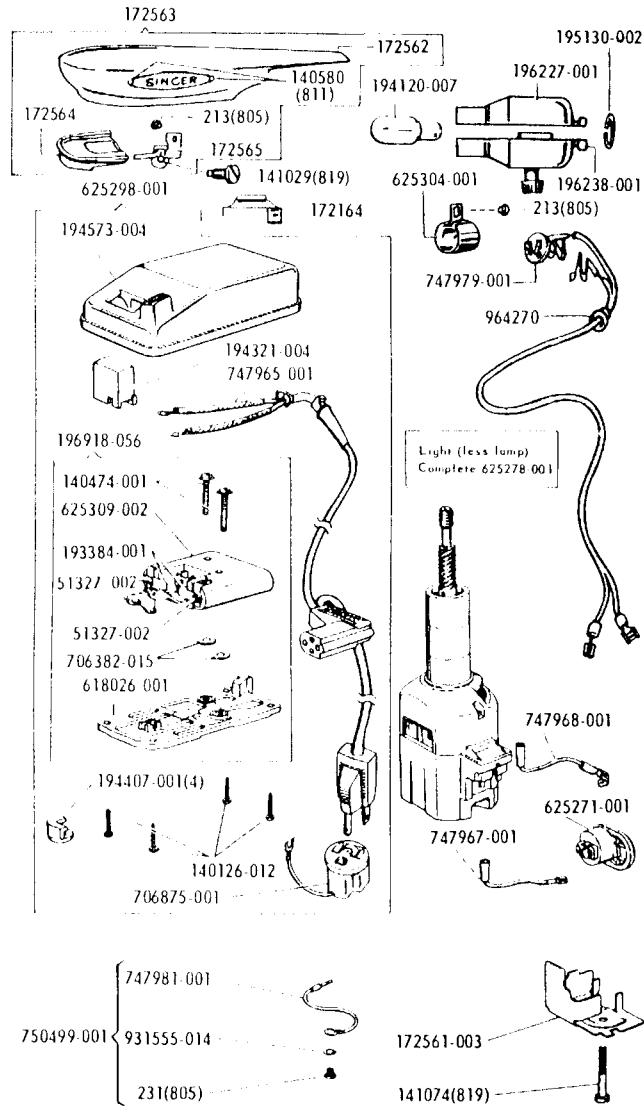

Machine No. 503A4

