


If your tension does not release when lifting the presser bar - more than likely the tension (Plus/Minus) cap may be broken and may require replacement. Generally the release bar cracks into

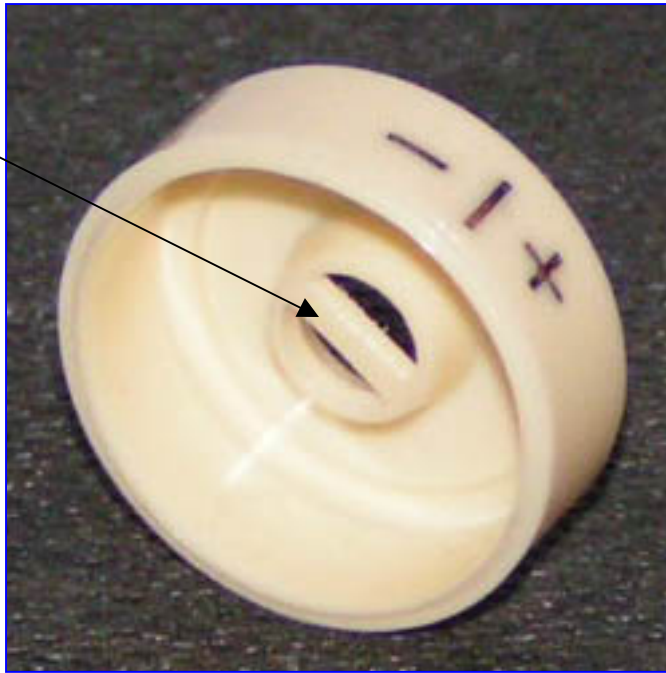

Just to note: I find at times that the presser bar lifter screw may be loose as well - just a service tip for you

